

"REAL TUFF" ADD-ON BAY ASSEMBLY INSTRUCTIONS



Per Pier

PARTS LIST

REQUIRED TOOLS

'IN-LINE' ADD-ON OPTION PL

1. 2 x Posts

2. Shelving Tiers

3. 2 x Plastic Wedges per shelf 4. 2 x Stainless Steel Shelf Clips per shelf


10mm Open Ended Spanner (Shifter)

Rubber Mallet


Weight Capacity Weight Capacity 150kg 250kg

Per Pier


* It is recomended to remove Real Tuff 'Drop-On' Shelf inserts before assembling, then replace after shelving is positioned

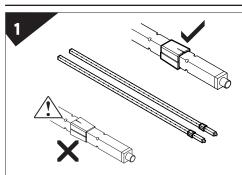

Lay two (2) posts side-by-side. Clip a wedge onto each post to locate the bottom shelf position. Match same height as Starter Bay.

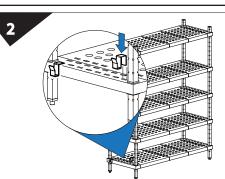

Insert two (2) Shelf Clips into the outer location holes on the bottom shelf of the Starter Bay.

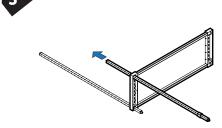


Lay a single shelf upright on its longest edge. Slide a post through 2 corner post-holes, at one end only.



Align Add-on Bay with Starter Bay. Lower open end of shelf onto clips so that both shelves are level.






a. Clip 2 wedges to both posts to hold the 2nd shelf. b. Insert 2 Shelf Clips into the 2nd shelf of Starter Bay.




c. Align post ends with 2nd shelf and carefully lower onto both clips and wedges securely.

Tap shelf down to fit firmly onto wedges & clips, using a light to medium force. (approximately 5kg of force).



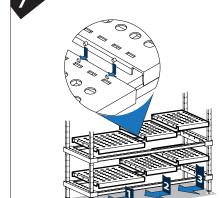

'Drop-On' + Slide each Real Tuff (plastic) Shelf, one at a time, to lock and engage together.

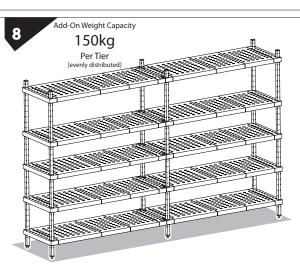

Repeat steps 6 and 7 above to install remaining shelves, and step 8 to replace Real Tuff 'Drop-On' Shelves back onto each Shelving Tier.



Level shelving with floor by adjusting Bullet Feet using a spanner