# MANTOVA REAL TUFF SHELVING



# "REAL TUFF" STARTER BAY ASSEMBLY INSTRUCTIONS



#### **PARTS LIST**

## **REQUIRED TOOLS**

### LAYOUT/CAPACITY

1. 4 x Posts (pre-assembled with Cap & Bullet Feet)

2. Shelving Tiers (3, 4 or 5 shelves)

3. 4 x Plastic Wedges per shelf


4. Real Tuff 'Drop-On' Shelves

Rubber Mallet 10mm Open Ended Spanner / Shifter




Weight Capacity
250kg
Per Tier


\* It is recomended to remove Real Tuff 'Drop-On' Shelf inserts before assembling, then replace after shelving is positioned

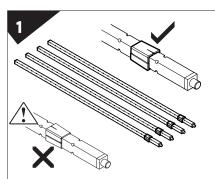

Lay 4 posts side-by-side. Clip a wedge onto each post to locate the bottom shelf position.

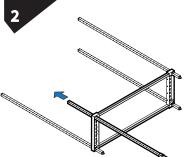


\* Lay a single Shelving frame upright on its longest edge. Slide a post through each corner post-hole.

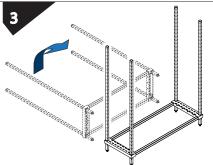


Lift and rotate assembly to its feet.




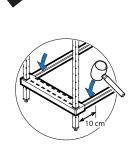


Tap all 4 corners of shelf with a Rubber Mallet to fit firmly onto wedges. (Use 5kg of force).

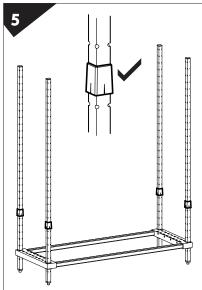

Clip a wedge onto each post to locate the second shelf.

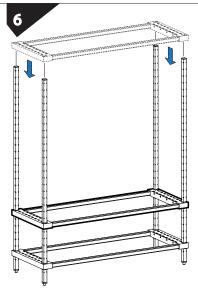


Align post ends with 2nd shelf and carefully lower onto wedges.

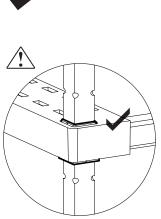

IMPORTANT: Ensure plastic wedges are aligned correctly within each corner post-hole on the shelf.



Tap shelf down to fit firmly onto wedges, using a light to medium force. (approximately 5kg of force).

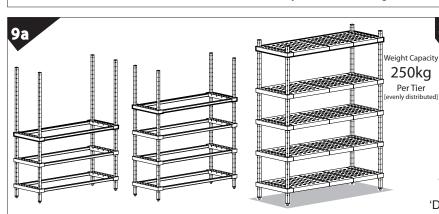

Repeat steps 5 through to 8 above to install remaining Shelving frames. \* Replace Real Tuff 'Drop-On' Shelves back onto each Shelving Tier.

'Drop-On' + Slide each Real Tuff (plastic) Shelf, one at a time, to lock and engage together.



Level shelving with floor by adjusting Bullet Feet using a spanner